



Fixing tapes

Self-adhesive tape for fixing the heating cables on pipes or other equipment.



GT-66 Glass cloth tape for attaching heating cable to pipe. Not for stainless-steel pipes or for installation temperatures below 4.4°C. 20 m per roll, 12 mm width
PN C77220-000

GS-54 Glass cloth tape for attaching heating cable to pipe. For stainless-steel pipes or for any installation below 4.4°C. 16 m per roll, 12 mm width
PN C77221-000

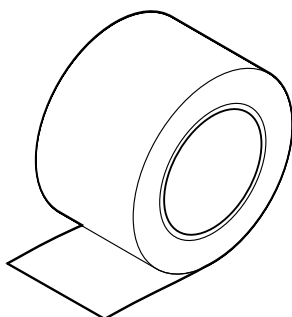


ATE-180 Aluminium tape* for attaching heating cables and thermostat sensors to pipes and tanks. Minimum installation temperature: 0°C. 55 m per roll, 63.5 mm width
PN 846243-000

* Power output of selfregulating heating cables might increase when installed with aluminium tape or other heat transfer aids. Please use TraceCalc or contact your Tyco Thermal Controls representative for further details.


Protective grommet

G-02 Silicone grommet that protects the heating cable at sharp edges such as endplates of insulation cladding, flanges etc. It can be cut-to-length and resists temperatures up to 215°C.
PN 412549-000

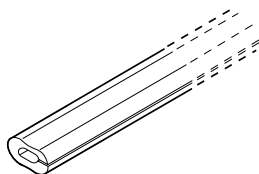

Terminals

HWA-WAGO-TSTAT-KIT Thermostat kit with supplementary terminals to connect thermostats of type RAYSTAT-EX-02 to the junction boxes JBS, JBM and JBU. The kit includes 2 terminals WAGO 284 series (1 x L, 1 x PE), 1 power cable gland GL-36-M25, 1 end plate and 1 installation instruction
PN 966659-000

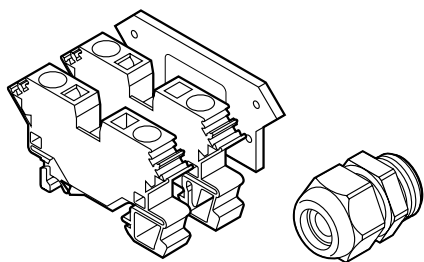

HWA-WAGO-PHASE Phase/neutral terminal (EEx e), spare part for various junction boxes, max. 10 mm² solid/stranded.
PN 633476-000

HWA-WAGO-EARTH Earth terminal (EEx e), spare part for various junction boxes, max. 10 mm² solid/stranded.
PN 911505-000

HWA-WAGO-ENDPLATE End plate for HWA-WAGO-..., 10 mm² terminals, spare part.
PN 983674-000

HWA-WAGO-JUMPER Jumper to bridge HWA-WAGO-..., 10 mm² terminals, spare part.
PN 550942-000

